

Fryer & Filter Unit

Gas or Electric



Operators under the age of 18 must not clean the machine.
Operator to wear PVC or disposable apron and gloves when cleaning the machine.
Ensure electrics do not get wet during cleaning – cloths to be well wrung out.



DAILY


1

Ensure the fryer is **below 50°C**, the electricity / gas supply is disconnected and where applicable the pilot light turned off before cleaning.
Using **M1** Cleaning Detergent solution and a designated cloth, **clean all external surfaces** of fryer including the back panel and wheels. Take care not to spill cleaning solution into the oil.

WEEKLY

1

If the oil is to be reused then drain the oil into the filter unit through the Teflon bag. If oil to be disposed of then drop into the designated waste oil vessel.
Remove the fryer baskets, basket arms and crumb catcher tray.
Clean the removed items with **M1** Cleaning Detergent solution.
Once oil has been drained, close the drain valve.

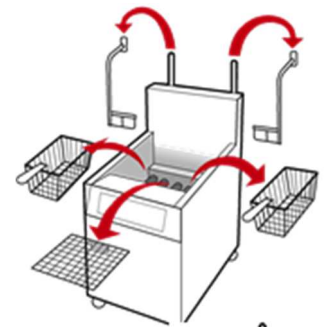

2

Fill the fryer with M1 Cleaning Detergent solution; ensure the heating elements are covered.
Set fryer **thermostat to 100°C** and **turn on** fryer pilot light. Allow solution to come to **boil** and then **turn** fryer and **pilot light off**. Allow the solution to **soak for 20 minutes**.
Use fryer brush to clean all internal surfaces including undersides of elements and tide marks on tank rim with a scourer.



3

Drain the used M1 Cleaning Detergent solution into a suitable container and pour down cleaning station drain channel.
Rinse all internal surfaces to remove all traces of detergent with warm clean water and drain into the container, again pour down cleaning station **drain**.
Wipe the internal surfaces **dry with a paper towel** and replace all removed items.
Clean the fryer externals as per daily method.
Close the drain valve, refill the fryer with oil and relight the pilot light.

4

To clean the Filter Unit.
Unplug the unit from the power supply and wheel the unit to the wash area.
Unclip the outlet and inlet pipes, remove the splash guard, and remove the Teflon bag.
Take the **Teflon bag** and **wash in warm water only**; inspect bag for tears and holes, if any, order a new bag.
Clean all other removed items with **M1** Cleaning Detergent solution.
Clean the bath and frame with **M1** Cleaning Detergent solution and a designated cloth do not wet the electric pump.
Allow all parts to air dry and replace all removed parts.
Return unit to a cooked storage area.

