DRAINWATCH Drain Dosing System

Safety Notes

IMPORTANT:

Please read the following precautions carefully before using this equipment.



This unit contains high voltage circuits that may expose you to the danger of electric shock.



Means for disconnection must be

incorporated in accordance with the wiring rules.

Do not open the enclosure without isolating the signal and supply sources. Ensure that these sources have been isolated for at least 5 minutes before entering the enclosure.



Do not power the unit outside of the values stated on the rating label.

Do not use damaged or frayed cables.

Do not dismantle or modify this equipment.



Never insert fingers into mechanisms without turning the power supply off first.



Do not mount the unit to unstable, irregular or non-vertical surfaces.



Do not place heavy objects on top of the unit.



Do not attempt to place items (such as screwdrivers) into the moving parts of the pump head.



Always ensure that care is taken when handling chemicals.



Do not discard of the manual, this must be retained.

This unit must be installed by suitably gualified personnel in accordance with local regulations, or in the absence of local regulations, installed in accordance with the applicable requirements in the National Electrical Code, NFPA 70, Canadian Electrical Code (CEC), Part 1, CSA C22.1, and Standard for Ventilation Control and Fire Protection of Commercial Cooking Operations, NFPA 96.

This appliance can be used by children age from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

Before Installation

Ensure you have checked all parts required are present and inspect for any damage before installation. In the unlikely event your items are faulty, **DO NOT** install faulty or damaged parts as this unsafe and will void any warranty. Please return to your distributor in the original delivery condition including any packaging. This unit is **ONLY** to be installed by a suitably qualified person complying with local regulations.



Installation

Mounting and connection



Step 1: Using the wall plugs and screws specified for this unit, fix the mounting bracket to the wall. There is an embedded spirit level to aid with this part of the installation.

Step 2: Mount the unit to the wall by hooking it onto the wall bracket. Press down firmly and you will hear a click sound when the unit is secure.

Step 3: Ensure there is no power to the unit. remove the front cover by turning removing the screw anti-clockwise and pulling the front cover towards you as shown.

Step 4: Insert one end of the tube ensuring that it is slotted into the body of the enclosure as shown.

IMPORTANT INFORMATION: Silicone grease provided must be applied to the tube

and the pump & rotor assembly before the tube is inserted. Failure to apply the grease will affect the pump performance during operation.


Step 5: Now by manually rotating the pump head, feed the tube into the unit as shown. **IMPORTANT** to aid prolonging tube life and efficent running of both mains and battery powered models. Please use the Silicone Grease (supplied) on the outer of the tube. Spread liberally to the outside of the tube to help ease installation, this will also aid continuous smooth operation and help prevent any potential snagging.

Step 6: Now insert the other end of the tube ensuring that it is slotted into the body of the enclosure as shown.

IMPORTANT INFORMATION: Brightwell Dispensers Ltd (manufacturer) accepts no responsibility and/or damages caused to either the product or premises if the installation process is not complied with in full.






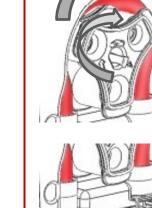




Installing the Pipe Injector

Step 1: Drill a 14mm hole in the top of your intended waste pipe.

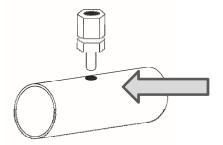


Step 2: For added security it is recommended to use Silicone Sealant (not-supplied) in-between the Pipe Injector and the drilled hole (as shown above). Slowly wind in the Pipe Injector until tight, it is not necessary to over tighten with tools as this may damage the threading on the injector.

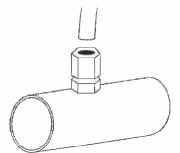

Step 3: Now connect the delivery tubing to the Pipe Injector, turning the compression nut clockwise until hand tight.

Mains Power Supply (mains version only)

Connect Brown and Blue cores of the two core cable to a maximum 240V AC single phase mains power supply.

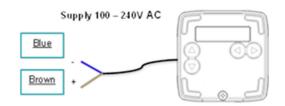

IMPORTANT INFORMATION:

Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

