

Eloma Joka Oven



Operator to wear goggles, PVC or disposable apron and gloves when cleaning the Machine. Oven must be 50°C before cleaning is carried out. This oven is semi-automatic clean using M6 Oven and Utensil Wash. A face visor must be worn when using M3 Oven Cleaner.



DAILY


1

Close the front doors. Select the **“special” Programme**. Using arrows scroll down to **“auto clean”**. Select **“ok”**. Select **“Level 3”**. Select **“Start”**. During the clean the oven will automatically dispense cleaning chemicals. Wait for the programme to finish. It may appear that the programme pauses during the clean, this is normal.




2

Remove the side racks from the oven. Pour 3 litres of **hot M1 Cleaning Detergent** solution **down the drain hole**. Clean the drain hole with a large bottle brush.

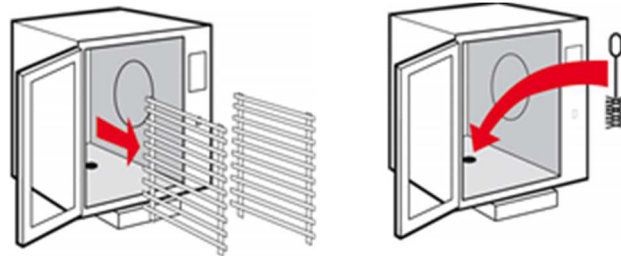

3

Undo the two screws on the side panel which covers the heating element. Open the side panel to **expose the heating element**. **Clean the base of the oven, behind the panel and the heating element** with **M1 Cleaning Detergent** solution and a cloth. Note if burn on is really bad then **M3 Oven Cleaner can be used**. Reassemble all parts of the oven. Rinse all internal surfaces remove all traces of debris or detergent.

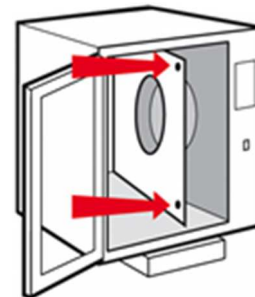

4

Separate the glass doors, **wipe all glass surfaces** with **M1 Cleaning Detergent** solution and a cloth. **Clean the stand and top** of oven with **M1 Cleaning Detergent** solution and a cloth.

